

# Sunbeam TOASTERMATIC


## TOASTER

### THE ONLY COMPLETELY AUTOMATIC TOASTER

Your Sunbeam Toastermatic is a finely engineered precision appliance. Read and follow these instructions carefully to obtain the best results and years of trouble-free operation.

#### HOW YOUR SUNBEAM TOASTERMATIC OPERATES.

Look into the toasting compartment on the side marked "one slice." The shaped piece of wire (see illustration) is the lever switch. When a slice of bread is dropped into the compartment it depresses the switch and turns on the power. After a few seconds the toasting rack gently lowers to the toasting position. Toasting continues until bread is cooked to the colour selected by the colour control knob. Power cuts off automatically and after a few seconds the bread is gently raised without noise. WHEN YOU LIFT THE TOAST FROM THE SIDE MARKED "ONE SLICE" THE LEVER SWITCH RISES AND RE-SETS AUTOMATICALLY.

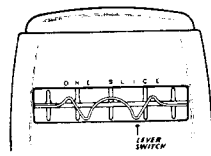

#### ABOUT THE BREAD YOU USE.

Sunbeam Toastermatic is designed to make toast to a colour to suit every taste, every household. When using slices of uneven size, place the bigger slice in the one-slice compartment. Many small end pieces of vienna type bread are too small to operate the lever switch and toast successfully. Remember, different bread textures react differently and if two slices from different loaves are cooked at the same time, they will not always cook to the same colour.

#### SELECTING THE COLOUR.

When first you use your Toastermatic set the control knob at position 9. Cook two slices of toast. If the toast is too light for your taste, re-set the control knob one or two points higher (10 or 11). Remove the toast from the side marked "one slice," drop it in and re-cook at the darker setting. If necessary, re-set the control and repeat the cooking cycle until the desired colour is obtained. For lighter toast reduce the setting one or two points. (Note: You will need to cook fresh slices of bread to check the lighter colour.)

The control knob does not require alteration for everyday use. However, if you change from one type of bread to another, an alteration to the setting may be required; e.g., from white breads to close textured rye or wheatmeal—a higher setting; high sugar content malt loaves, raisin loaves, etc.—a lower setting.


#### TOASTING HINTS.

1. If you at any time require only one slice of toast, always place this in the side marked "one slice."
2. If slices are uneven in height always place the higher slice into the side marked "one slice."
3. Bread cut to varying thicknesses can be toasted simultaneously. Remember, always place the thinner slice in the side marked "one slice."
4. If the bread does not lower make sure that the wall switch is on and that the 3-pin plug is correctly fitted into the power point. Then simply lift the slice from the side marked "one slice" and again drop it onto the lever switch. DO NOT PRESS OR FORCE THE CARRIAGE DOWN.
5. Should you at any time find it necessary to interrupt the cooking cycle, simply switch off the power at the wall switch. Toast will rise automatically. THIS WILL IN NO WAY INTERFERE WITH THE AUTOMATIC OPERATION OF THE TOASTER. Once the power is turned on further slices of bread can be immediately dropped in for toasting.
6. To re-heat toast, lift the toast from the side marked "one slice," drop it onto the lever switch and toast will re-heat without over cooking. Never re-heat buttered toast.

**CARE AND CLEANING.** The hinged crumb tray enables you to clean your toaster in seconds.

1. **IMPORTANT:** Turn off the wall switch and remove the 3-pin plug from socket.
2. **NEVER TIP THE TOASTERMATIC UPSIDE DOWN,** otherwise crumbs may become caught in the mechanism of the toaster. Hold the toaster upright and spring open the hinged crumb tray.
3. Shake well to remove crumbs.
4. Wipe over the blue chrome with a soft, dry cloth. Use a slightly dampened cloth if the toaster is grease marked.

**IMPORTANT.** Always use the handles for lifting the toaster. NEVER PLACE THE FINGERS INTO THE TOASTING COMPARTMENT. You may accidentally trip the lever switch and turn on the power

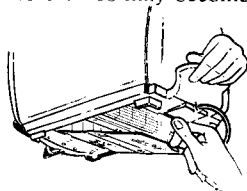

## GUARANTEE

Complete the details on the Sunbeam Guarantee Register Card packed with your appliances and return it within fourteen days. Upon its receipt your appliance is automatically covered by warranty for a period of twelve months (three months commercial use) against electrical and mechanical defects in workmanship and material. It does not cover misuse, negligent handling or use on a current or voltage other than that specified on the appliance and does not include the cord.

## SUNBEAM SERVICE

Service under guarantee must be carried out at an authorised Sunbeam Service Centre. Enquire from your local electrical dealer or direct to a Sunbeam Centre listed below. **NEVER ALLOW UNAUTHORISED PERSONS TO TAMPER WITH YOUR APPLIANCE.** Should your appliance require maintenance service, or service under guarantee, take it to your electrical dealer or direct to the nearest Sunbeam service centre.

## BE ASSURED OF QUICK SERVICE

Should distance prevent you calling personally at a service centre, the appliance may be forwarded direct to a Sunbeam service centre by convenient transport. **NOTE:** Do not address your appliance to a centre marked with an \*—they provide over-the-counter service only.

When forwarding your appliance, prepare a letter explaining the nature of your complaint, the method of despatch and for service under warranty include full information, date of purchase, etc. Post this separately. Prepare a tag stating your full name and address and attach it to the appliance. Pack your appliance carefully into a strong carton with plenty of newspaper, making sure that the plug is separately wrapped to prevent damage to the appliance surface.

## SUNBEAM SERVICE CENTRES:

### SUNBEAM CORPORATION LIMITED at:—

N.S.W.	Troy Street, Campsie; *O'Riordan Street, near Coward Street, Mascot; *222a Castlereagh Street, Sydney; 187 King Street, Newcastle.
VICTORIA	Sloane Street, Maribyrnong; *373 Little Bourke Street, Melbourne.
SOUTH AUSTRALIA	450 Torrens Road, Woodville; *The Block, Pulteney Street, Adelaide.
QUEENSLAND	Hyde Road, Yeronga, Brisbane; *A3 Piccadilly Arcade, 340 Queen Street, Brisbane; 10 Stanley Street, Townsville; OR N. Pruden, 65 McLeod Street, Cairns; J. Michelmore & Co. Pty. Ltd., Mackay; Chandlers Rockhampton Pty. Ltd., Rockhampton
WESTERN AUSTRALIA	M. J. Bateman Pty. Ltd., 12 Milligan Street, Perth.
TASMANIA	Medhursts Wholesale Ltd., Hobart and Launceston.
NORTHERN TERRITORY	E. Wonson, 522 Smith Street, Darwin.
NEW ZEALAND	Brown & Dureau (N.Z.) Ltd., 1st Floor, Tasman Building, Anzac Avenue, Auckland, C.I.; Brown & Dureau (N.Z.) Ltd., McKay Motors Building, 64 Cambridge Terrace, Wellington, C.I.; Woolf & Salvesen Ltd., 17-19 Lichfield Street, Christchurch, C.I.; Charles Sonntag Ltd., 381 Princes Street, Dunedin, C.I.



Made by

# CORPORATION LIMITED

SYDNEY

MELBOURNE

ADELAIDE

BRISBANE

AUCKLAND, N.Z.